

Disassembly Instructions for ISO MAX V reader




Product Name / Model	Description
ISO MAX V / Any model	Universal portable reader



Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.

Tools Required

Tool Description	Tool Size (if applicable)
Nippers	Medium
Philips screwdriver (0)	Small
Cutter pliers	Medium
Hot Air Gun	Big

Product Disassembly Process

1	<p>All external plastics have to be removed from the reader (use Philips screwdriver to remove all screws).</p> <p>The keypad has to be removed from the top cover casing (use the Hot Air Gun with the cutter pliers in order to easily remove the keypad).</p>	
2	<p>The antenna wires have to be cut in order to easily separate the plastic support (use the nippers to do this operation).</p> <p>The display and the battery have to be removed from the plastic support (no tools are needed to do this operation).</p>	
3	<p>Dispose plastic parts of the reader in accordance with local recycling laws.</p>	

4	Dispose electronics parts of the reader in accordance with local recycling laws.	
5	Remove cables from batteries (use the nippers to do this operation). Dispose batteries of the reader in accordance with local recycling laws.	
6	Dispose cables of the reader in accordance with local recycling laws.	