

Disassembly Instructions for Mini Max II reader




Product Name / Model	Description
Mini Max II / Any model	Universal portable reader

Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.

Tools Required

Tool Description	Tool Size (if applicable)
Philips screwdriver (00)	Small

Product Disassembly Process

1	All external plastics have to be removed from the reader (use Philips screwdriver to remove all screws). Dispose plastic parts of the reader in accordance with local recycling laws.	
4	Dispose electronics parts of the reader in accordance with local recycling laws.	
5	Dispose the battery of the reader in accordance with local recycling laws.	
6	Dispose cables of the reader in accordance with local recycling laws.	